





GENERAL CONSIDERATIONS

Wrap-It-Heat, Model LIM-16 Drum Heater is specifically designed to assist the flow of viscous, Non-Flammable, Non-Hazardous materials contained in 16 gallon, high density, polyethylene plastic drums. Model, LIM-16 will fit standard 16 gallon plastic drums with a diameter of 14-1/2 inches.

Model, LIM-16 is designed for 120 volt AC, single phase operation. LIM-16 is manufactured using rugged aluminized steel. The heat delivered to the plastic drum after the initial thermostat stabilization period does not exceed 165°F as recommended by plastic drum manufacturers. The foregoing, is accomplished with a preset, bimetal thermostat that is mounted directly upon the heater band. LIM-16 is activated with an easily accessible ON/OFF switch.

LIM-16 comes equipped with a strike and catch clamp to be adjusted for a snug fit to the drum, a six foot power cord and three pin plug for electrically grounded operation. THESE HEATERS ARE NOT WATERPROOF. DO NOT LET THEM GET WET.

SET UP INSTRUCTIONS

After reviewing the Warning Sheet included with the operating instruction and the enclosed brochure sheet, place the LIM-16 over the drum rim. Mount the LIM-16 near the drum base. Tighten the clamp spring nuts after closing the clamp to ensure you have a snug fit between the drum heater and the plastic drum. CAUTION: Failure to secure an absolute tight fit between the drum heater and the drum may result in heater failure. If two LIM-16's are placed upon the same drum, be sure that the power cord of the uppermost drum heater falls upon an unheated section (clamping area) of the lower drum heater.

Before energizing your drum heater, make sure that the content level in the drum you are heating is above the top edge of the heater band. Should the material fall below the band, the heater may not cycle, eventually decreasing heater service life. Model LIM-16 is equipped with two pilot lights; one green and the other red. The green pilot light will glow continuously as long as the heater is plugged into an active electrical outlet. The red pilot light will glow until the heater reaches the thermostat set temperature and then will go on and off as the preset bi-metal thermostat cycles.

When you are heating non-flammable, non-hazardous, material for the first time using your new model LIM-16, the material temperature should be monitored with a thermometer. Record the thermostat setting position for future reference.

The thermostat setting you have determined for one material and set of environmental conditions, may not be accurate for a different material. Please repeat the entire set-up procedure with the new material to ensure the best results with your new Wrap-It-Heat, Model LIM-16.

OPERATING INSTRUCTIONS

All material being heated with Model LIM-16 should be mixed during the heating process to secure an accurate temperature reading. The material near the outside of the drum and adjacent to the heater will heat faster than the material near the center of the drum.

For optimum results, monitor the material temperature with a thermometer while heating it. The temperature of the material in the drum depends upon drum placement (drafts, etc), heater placement on the drum (snug fit) and the heat receptive properties of the particular material being heated. The drum seam or any other defects in the drum should be spanned by the gap in the heater band (clamp area).

Expo's 120 volt/145 watt drum heater is equipped with an electrically grounded, three pin plug. Under no circumstances should the plug be altered or removed; your warranty will automatically be voided.

> **EXPO ENGINEERED INCORPORATED** 1824 SOUTH CICERO AVENUE ● CICERO, IL 60804 PHONE: 708-780-7155 • FAX 708-780-7125

CAPACITY (GAL.)	55	30	16	5	
VOLTS	120V	120V	120V	120V	
WATTS	800W	335W	145W	100W	
TEMPERATURE					
CHA NGE IN DEGREES					
	TIME IN HOURS FOR TEMPERATURE CHANGE				
10	2.12	2.76	3.40	1.54	
20	4.23	5.51	6.79	3.08	
30	6.35	8.27	10.19	4.62	
40	8.46	11.02	13.58	6.15	
50	10.58	13.78	16.98	7.69	
60	12.69	16.53	20.37	9.23	
70	14.81	19.29	23.77	10.77	
80	16.92	22.04	27.16	12.31	
90	19.04	24.80	30.56	13.85	
100	21.15	27.55	33.95	15.38	
110	23.27	30.31	37.35	16.92	
120	25.38	33.07	40.74	18.46	
130	27.50	35.82	44.14	20.00	
140	29.62	38.58	47.53	21.54	
NOTES:					
THESE TIMES ARE FOR WAT	ER. FOR OTHER	MATERIAL	S. MULTIPL	YTHE	
ABOVE TIMES BY THE SPECI					
THESE MINIMUM TIMES AS		THE BAND	HEAT ENTE	RS THE	
DRUM AND THAT NO HEAT I	S LOSS.				
THE IDEAL CONDITIONS	S CAN BE APPRO	ACHED BY:			
1) COVERING THE TOP					
1) COVERING THE TOP 2) INSULATING THE SIDES, TOP AND BOTTOM					
 INSULATING THE SIDES, INSULATING THE HEATER 			E CONTROL	POV	
INSULATING THE HEATER KEEPING THE DRUM OUT		COVER IH	E CONTROL	DUX.	
,		TONIALLY			
5) STIRRING THE DRUM CON			FUE CAME		
6) THE SURROUNDING ENVIO			I DE SAME		
TEMPERATURE AS THE DI	KUMS CONTENTS	٥.			

LIM-16 is used for, but not limited to, the following heating applications.

- Increase flow rate of viscous materials.
- Raise temperature of non-flammable, non-hazardous chemicals
- Heat detergents and surfactants
- Keep water from freezing/maintain set temperature
- Heat butterfat and tallow (white grease)
- Heat corn & soy bean oil
- Warm milk for calves

NOTE: The chart to the left shows temperature change vs time in hours on water.

LIM-16 SPECIFICATIONS

DIAMETER	.14-1/2"
SHIP WEIGHT	.10 LBS
OPERATING VOLTS	120V AC ONLY
POWER OUTPUT	145W @ 120V AC
AMPERAGE DRAW	1 21 AMPERES @ 120\/

In addition to Model LIM-16 for 16 gallon drums, the following sizes are also available in the LIM Series: LIM-55 E/W for 55 gallon drums, LIM-30 for 30 gallon drums and LIM-05 for 5 gallon pails.

Expo Engineered Wrap-It-Heat LIM Series Drum and Pail Heaters are U.L. Listed and C.S.A. Certified.

NOTE: Do no leave heater on unless the unit is attended to by you or your personnel. Do not leave heater on overnight or over the weekend unattended.

WARNING

READ THIS WARNING BEFORE OPERATING THE DRUM HEATER FOR PLASTIC DRUMS AND PAILS!

THE FOLLOWING PRECAUTIONS MUST BE OBSERVED TO AVOID POSSIBLE INJURY OR PROPERTY DAMAGE!!

THE DRUM OR PAIL HEATER **MUST NOT** BE USED IN AREA WHERE **FLAMMABLE VAPORS** MAY, **AT ANY TIME**, BE PRESENT. FAILURE TO OBSERVE THIS CAUTION CAN RESULT IN FIRE OR EXPLOSION.

MONITOR THE TEMPERATURE WHILE HEATING YOUR MATERIAL!

DO NOT USE DRUM OR PAIL HEATER TO HEAT **FLAMMABLE MATERIALS.** EXPLOSION OR FIRE COULD RESULT. THE DRUM OR PAIL HEATER SURFACE IS **HOT** DURING OPERATION. DO NOT USE DRUM OR PAIL HEATER ON OR NEAR WHERE COMBUSTIBLE SUBSTANCES CAN BE IGNITED, RESULTING IN A FIRE.

NEVER USE THE DRUM HEATER TO HEAT FLAMMABLE MATERIALS OR USE IN A HAZARDOUS AREA!

TO AVOID HEATER FAILURE, DO NOT ALLOW THE HEATER AND/OR CONTROLS TO BECOME WET OR SPILL UPON THEM.

THE DRUM OR PAIL HEATER MUST BE **ELECTRICALLY GROUNDED** TO AVOID THE POSSIBILITY OF ELECTRICAL SHOCK TO THE OPERATOR. NEVER ALTER OR REMOVE THE SPECIAL HIGH AMPERE, THREE PIN, ELECTRICALLY GROUNDED PLUG SUPPLIED AS AN INTEGRAL PART OF THE HEATER.

THE **USER** MUST DETERMINE THE SUITABILITY OF THE DRUM OR PAIL HEATER FOR THE INTENDED HEATING APPLICATION. **DO NOT LEAVE** THE DRUM OR PAIL HEATER **UNATTENDED** DURING THE HEATING CYCLE. DISCONNECT THE HEATER FROM THE WALL RECEPTACLE WHEN IT IS **NOT** IN USE.

THE DRUM OR PAIL HEATER IS FOR INDOOR USE ONLY.

THE LEVEL OF THE MATERIAL BEING HEATED MUST BE ABOVE THE TOP EDGE OF THE DRUM AND PAIL HEATER TO ENSURE THE BEST TEMPERATURE SENSING AND INSURE LONG HEATER LIFE.

VENT CONTAINER WHILE HEATING OR IT MAY EXPLODE (OPEN VENT PLUG).

DO NOT USE DRAIN SPOUTS OR VALVES ON DRUMS OR PAILS THAT CAN FAIL AT ELEVATED TEMPERATURES, CAUSING LEAKS, LOSS OF MATERIAL AND/OR POSSIBLE PERSONAL INJURY TO THE OPERATOR.

MAKE ABSOLUTELY SURE THAT THE DRUM OR PAIL HEATER IS TIGHTLY CLAMPED UPON THE CONTAINER!

NEVER USE A DRUM OR PAIL HEATER INSIDE OR ADJACENT TO **HEAVY AIRBORNE DUST LOCATIONS** SUCH AS GRAIN ELEVATORS, GRAIN SILOS, HAY STORAGE AREAS, ETC....

KNOW HOW APPLIED HEAT WILL AFFECT YOUR MATERIAL BEFORE USING THE DRUM OR PAIL HEATER. IF YOU ARE NOT SURE HOW TO HEAT YOUR MATERIAL, DO NOT USE THE DRUM OR PAIL HEATER UNTIL YOU ARE INFORMED AS TO HOW THE APPLICATION OF HEAT WILL AFFECT YOUR MATERIAL – CONTACT YOUR MATERIAL SUPPLIER.

EXPO ENGINEERED INCORPORATED 1824 SOUTH CICERO AVENUE ● CICERO, IL 60804 PHONE: 708-780-7155 ● FAX 708-780-7125

EXPO ENGINEERED PRODUCT WARRANTY

YOUR EXPO ENGINEERED PRODUCT IS GUARANTEED AGAINST DEFECTIVE MATERIALS AND WORKMANSHIP FOR **ONE YEAR** FROM THE DATE OF ORIGINAL PURCHASE. THIS GUARANTEE **DOES NOT** COVER FAILURE DUE TO WATER SOAKING, SPILLAGE, ABUSE, ALTERATION TO PRODUCT OR MISAPPLICATION.

IN CASE OF FAILURE, CONTACT EXPO ENGINEERED INCORPORATED. DETERMINATION OF THE SUITABILITY OF THE GOODS DESCRIBED ON THE FACE, HEREOF, FOR THE USE CONTEMPLATED BY BUYER OR BUYER'S CUSTOMERS FOR SUCH GOODS IS THE SOLE RESPONSIBILITY OF BUYER OR BUYER'S CUSTOMERS, WHICHEVER THE CASE MAY BE. EXPO ENGINEERED SHALL HAVE NO RESPONSIBILITY IN CONNECTION. THEREWITH.

BUYER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PROPERTY OF BUYER OR OTHER, ARISING OUT OF THE USE OR POSSESSION OF THE GOODS FURNISHED, HEREUNDER.

EXPO ENGINEERED INCORPORATED WARRANTS ONLY THAT THE GOODS SUPPLIED, HEREUNDER, SHALL MEET THE DESCRIPTION OR SPECIFICATIONS STATED, HEREIN. BUYER'S EXCLUSIVE REMEDY AND EXPO ENGINEERED'S SOLE LIABILITY, HEREUNDER, SHALL BE LIMITED TO REFUND OF THE PURCHASE PRICE OF, OR REPLACEMENT OF, ALL GOODS SHOWN TO BE OTHERWISE THAN AS WARRANTED.

EXPO ENGINEERED INCORPORATED SHALL IN NO CASE BE LIABLE OTHERWISE, OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, PROVIDED THAT NOTHING CONTAINED, HEREIN, SHALL LIMIT BUYER'S RIGHT TO RECOVER CONSEQUENTIAL DAMAGES FOR INJURY TO HIS PERSON WHEN THE GOODS PURCHASED ARE CONSUMER GOODS.

REFUND OR REPLACEMENT IS CONDITIONAL UPON GIVING EXPO ENGINEERED INCORPORATED NOTICE WITHIN **ONE YEAR** FROM DATE OF SHIPMENT BY EXPO ENGINEERED INCORPORATED THAT SAID GOODS ARE OTHERWISE THAN AS WARRANTED. FAILURE BY BUYER TO GIVE SAID NOTICE WITHIN SAID **ONE YEAR** PERIOD SHALL CONSTITUTE WAIVER BY BUYER OF ALL CLAIMS, HEREUNDER, WITH RESPECT TO SAID GOODS.

IF REQUESTED BY EXPO ENGINEERED INCORPORATED, BUYER SHALL PROMPTLY RETURN TO EXPO ENGINEERED'S PLANT ALL UNCONSUMED GOODS ALLEGED BY BUYER TO BE OTHERWISE THAN AS WARRANTED AND EXPO ENGINEERED INCORPORATED WILL PAY FREIGHT THEREON.

THE WARRANTY IS IN LIEU OF ALL OTHER WRITTEN OR UNWRITTEN EXPRESS OR IMPLIED WARRANTIES AND EXPO ENGINEERED HEREBY EXPRESSLY DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY AGAINST INFRINGEMENT OF MERCHANTABILITY OR FITNESS FOR PURPOSE OF THE GOODS SUPPLIED, HEREUNDER, ALL SAID GOODS BEING SUPPLIED "AS IS".

IN THE UNLIKELY EVENT THAT A PROBLEM SHOULD ARISE THROUGH THE USE OF YOUR EXPO ENGINEERED HEAT PRODUCT, PLEASE CONTACT THE CUSTOMER SERVICE DEPARTMENT AT EXPO ENGINEERED INCORPORATED BY DIALING 708-780-7155 OR FAX 708-780-7125.

PLEASE REFER TO THE **WARNINGS** AND THE **OPERATING INSTRUCTIONS** ACCOMPANYING THIS WARRANTY BEFORE OPERATING YOUR NEW EXPO ENGINEERED PRODUCT.

EXPO ENGINEERED INCORPORATED

1824 SOUTH CICERO AVENUE ● CICERO, IL 60804
PHONE: 708-780-7155 ● FAX 708-780-7125